



FireSmart 101 (External Site)




·ΔσVdΔλゼ שִׁ"רֹדְׁסְבֹּל V ἀCL)·Ċ° (Δλゼ ◊'ר)

Grand Council of the Crees (Eeyou Istchee)

Grand Conseil des Cris (Eeyou Istchee)

∆Ad NVA"רול Gouvernement de la Nation Crie

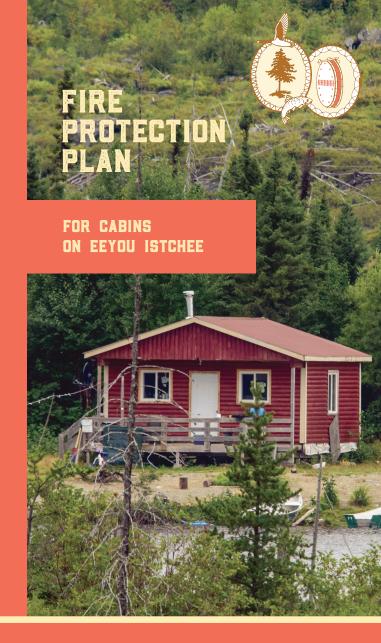

Environment and Remedial Works Department Enhancement Program

284 Queen Street, Suite 20 Mistissini, Quebec G0W 1C (418) 923-2652 Ext: 1223

Capital Works and Services Department Fire Protection

Oujé-Bougoumou 418) 745-2576 Ext: 225

« I WANT TO SAY TO PEOPLE: DO NOT STOP GOING OUT ON THE LAND. IT IS OUR SOURCE OF SURVIVAL. IT HELPS US MENTALLY. PHYSICALLY AND EMOTIONALLY. >>

- LEE ROY BLACKSMITH.

CREE NATION GOVERNMENT

REGIONAL FIRE MARSHAL



- Natural.
- Mechanical.
- Chemical: propane, naphtha or cloth mixed with chemicals.



WOOD STOVES

- Generally located inside cabins, tents, sheds and storage areas.
- Cabins with two sections usually have stoves in both sections.
- Place cement blocks underneath an airtight stove.
- Clean chimney stove regularly.
- Properly install the chimney
- Birch wood sticks to pipes, clean pipes often, there are logs on the market that will clean the pipes.
- Leave a 36-inch clearance between the top of the stove and the ceiling and between the walls and the stove.
- ◆ Do not hang items above the stove; do not dry clothing, wet socks, scarves, ski-pants, boot duffles or gloves above the stove.
- ◆ Look at the manufacturer's labels on the pipes.
- Keep surrounding area free of clutter.
- ◆ Cabin should be closed up underneath.
- Store hazardous materials including propane bottles, butane, gas and oil, in a safe area.



FIRE PROTECTION ITEMS

- Install a smoke detector on the ceiling, check the batteries regularly.
- Install a carbon monoxide detector 6 inches from the floor as propane leaks stay low to the floor.
- Invert and shake the dry chemical extinguishers on a regular basis to prevent the dry chemical from packing in the extinguisher.
- Fire extinguishers may not be effective in the cold if left for a long period of time.



OUICK EXIT

- A corridor or aisle across a room that leads the occupants of a cabin to an exit must be clear at all times.
- A secondary exit with a small porch to protect from snow is mandatory on all cabins; a window that opens outward may be considered a secondary exit.



CABIN EXTERIOR (SUMMER MONTHS)

- Place a 45-gallon drum that has been cut open at the top or a large tub underneath the roof to collect rain water as a source of water for extinguishing fires.
- Have on hand a water pump and hoses in the event of a fire.
- Clear around cabins to remove brush and flammable material and close off the frame of your cabin to prevent fire from going underneath

HOW TO USE A FIRE EXTINGUISHER







